HATIYOUTG NUX

Analog multi timer

MA4N

INSTRUCTION MANUAL

Thank you for purchasing HANYOUNG product.

Please check whether the product is the exactly same as you ordered.

Before using the product, please read this instruction manual carefully.

Please keep this manual where you can view at any time

HANYOUNGNUX CO.,LTD

HEAD OFFICE 1381-3, Juan-Dong, Nam-Gu Incheon, Korea. TEL:(82-32)876-4697

FAX:(82-32)876-4696 http://www.hynux.net

PT. HANYOUNG ELECTRONIC INDONESIA

FACTORY Cikar

JI, cempaka blok F16, No.02 Delta Silicon II Cikarang Bekasi Indonesia TEL: 62-21-8911-8120~4 FAX: 62-21-8911-8126 No.

Safety information

Before using the product, please read the safety information thoroughly and use it properly. Alerts declared in the manual are classified to Danger, Warning and Caution by their criticality

DANGER	DANGER indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury
WARNING	WARNING indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury
CAUTION	CAUTION indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury



There is a danger of occurring electric shock in the input/output terminals so please never let your body or conductive substance is touched.



- If there is a possibility of an accident caused by errors or malfunctions of this product, install external protection circuit to prevent the accident.
- This product does not contain an electric switch or fuse, so the user needs to install a separate electric switch or fuse externally. (Fuse rating: 250V 0.5A)
- To prevent defection or malfunction of this product, supply proper power voltage in accordance with the rating.
- To prevent electric shock or malfunction of product, do not supply the power until the wiring is completed.
- Since this product is not designed with explosion-protective structure, do not use it any place with flammable or explosive gas.
- Do not decompose, modify, revise or repair this product. This may be a cause of malfunction, electric shock or fire.
- Reassemble this product while the power is OFF. Otherwise, it may be a cause of malfunction or electric shock.
- If you use the product with methods other than specified by the manufacturer, there may be bodily injuries or property damages.
- Due to the danger of electric shock, use this product installed onto a panel while an electric current is applied.

A CAUTION

- The contents of this manual may be changed without prior notification.
- Before using the product you purchased, make sure that it is exactly what you ordered.
- Make sure that there is no damage or abnormality of the product during delivery.
- Do not use this product at any place with corrosive (especially noxious gas or ammonia) or flammable gas.
- Do not use this product at any place with direct vibration or impact.
- Do not use this product at any place with liquid, oil, medical substances, dust, salt or iron contents.
- Do not polish this product with substances such as alcohol or benzene.
- Do not use this product at any place with a large inductive difficulty or occurring static electricity or magnetic noise.
- Do not use this product at any place with possible thermal accumulation due to direct sunlight or heat radiation.
- Install this product at place under 2,000 m in altitude.
- When the product gets wet, the inspection is essential because there is a danger of electric leakage or fire.
- If there is excessive noise from the power supply, using insulating transformer or noise filter is recommended. The noise filter must be attached to a panel which is already connected to a ground and the wire between the filter output and power supply terminal must be as short as possible.
- If puttig power cables closely together then It is effective against noise.
- Do not connect anything to the unused terminals.
- After checking the polarity of terminal, connect wires at the correct position.
- When this product is connected to a panel, use a circuit breaker or switch approved with IEC60947-1 or IEC60947-3.
- Install the circuit breaker or switch at near place for convenient use.
- Write down on a label that if the circuit breaker or switch is operating then the power will be disconnected since the circuit breaker or switch is installed.
- For the continuous and safe use of this product, the periodical maintenance is recommended.
- Some parts of this product have limited life span, and others are changed by their
- The warranty period for this product including parts is one year if this product is properly used.

Suffix code

Model	Code	Description	
MA4N -		Analog multi timer (48 × 48 mm)	
	Α	2c (Time limit) * 11 pin type	
Device	В	2c (Time limit + Constantaneous) * 11 pin type	
selection	С	2c (Time limit), 2c (Time limit + Constantaneous) *Processed by mode selection (8pin type)	
Power supply voltag		24 - 240 V a.c / d.c (50 - 60 Hz) Dual usage	


Specification

Model		MA4N-A	MA4N-B	MA4N-C	
Power Supply voltage		24 - 240 V a.c / d.c 50 - 60 Hz			
Voltage regulation		±10 % from supply voltage			
Power consumption		5.3 VA (240 V a.c), 2.5 W (240 V d.c)			
Resetti		0.1 sec max			
11000111	START	U. F Sec max			
Min	Input INHIBIT	20 ms min		-	
Signal length	Input				
	RESET Input				
	START Input	Non volta			
Input	INHIBIT	Impedance in a sho	-		
condition	Input RESET Input	Residual voltage in a sh Impedance in o			
Out	tput	Time limit 2c	Time limit 1c Instautaneous 1c	Time limit 2c Time limit 1c Instautaneous 1c	
		N.O : 10 A 125 V a.c, 5 A 250 V a.c, 5 A 30 V d.c N.C : 3 A 125 V a.c, 2 A 250 V a.c, 1 A 30 V d.c			
Setting	g error	± 5 % ±0.05 sec max			
Repea	at error	± 0.3 % max			
Temperat	ture error	± 2 % max			
Insulation	resistance	100 MΩ min (Base on 500 V d.c)			
Dielectric	strength	2000 V a.c 50 / 60 Hz for 1 min			
Impulse	voltage	±2000 V max			
Vibration	Mechanical durability	10 - 55 Hz double amplitude 0.75 mm			
VIDIALIOII	Malfunction durability	10 - 55 Hz double amplitude 0.5 mm			
Shock	Mechanical durability	300 % (Approx. 30 G)			
SHOCK	Malfunction durability	100 % (Approx. 10 G)			
Life	Mechanical	Over 10 million operations (Open & Short frequency : 180 / min)			
expectancy	Electrical	Over 100,000 (250 V a.c 3 A load resistance)			
Terminal type		Socket type 11 Pin Socket type 8 Pin			
Ambient temperature		-10 ~ 55 °C (With no condensation)			
Conservation temperature		-20 ~ 65 °C (With no condensation)			
Ambient humidity		35 ~ 85 %R.H.			
Weight		About 100g (Including fixing bracket)			

Time range

Max time	Time unit	sec	min	hrs	×10h
	1.2		0.12 ~ 1.2		1.2 ~ 12
Setting range	3		0.3 ~ 3		3 ~ 30
	12		1.2 ~ 12		12 ~ 120
	30		3 ~ 30		30 ~ 300

Part name

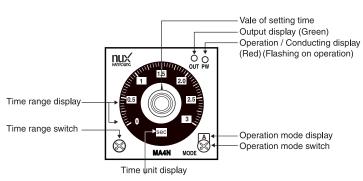


■ External connection

Please select operation mode by turning of operation mode switch in front of panel.

User can select 6 types of operation modes Operation mode is displayed as like

A, B, C, D, E, F or A1, B1, C1, D1, E1, F1.

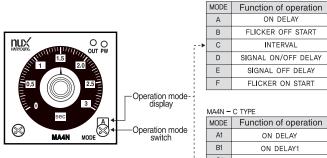

	В	FLICKER OFF START				
>	С	INTERVAL				
	D	SIGNAL ON/OFF DELAY				
	Е	SIGNAL OFF DELAY				
	F	FLICKER ON START				
1						
- 1						
	MA4N -	C TYPE				
	MA4N -	C TYPE Function of operation				
- 4	MODE	Function of operation				
	MODE A1	Function of operation ON DELAY				
>	MODE A1 B1	Function of operation ON DELAY ON DELAY1				
	MODE A1 B1 C1	ON DELAY ON DELAY1 ON DELAY2				


ON DELAY

MA4N -A, MA4N - B TYPE

MODE

■ Selection of time unit


Please select time by turning of Time range switch Use can select 16 types of time ranges and it is displayed as like sec, min, hrs, 10h

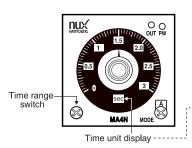



	Time unit	Time range
	sec, min, hrs, 10h	0, 0.2, 0.4, 0.6, 0.8, 1.0, 1.2
•		0, 0.5, 1, 1.5, 2, 2.5, 3
		0, 2, 4, 6, 8, 10, 12
		0 5 10 15 20 25 30

Dimension and panel cutout

[unit: mm]

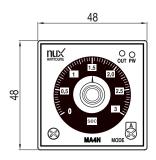


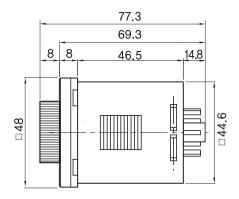

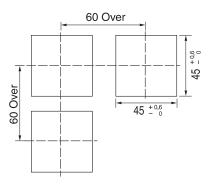


Connection diagram

■ MA4N-A / MA4N-B

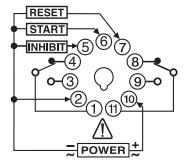

- ·MA4N-A: 2 relay work as Time limit. ·MA4N-B: The relay connected ①, ③, @work as Instantaneous and othr ealys work as time limit.
- *Please refer to Timing charts for working of relays

■ Selection of time unit

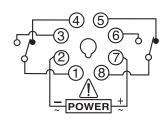

- ·Two relays in Mode A1 and D1 work as Time limit.
- The relays in Mode B1, C1, E1, F1 connected ①, ③, ④ work as Instantaneous.
- And other realys work as time limit. *MA4N-C : According to timing charts, relays works as Time limit or Instantaneous.
- *Please refer to Timing charts for working of relays.

