Three-Phase Non-Contact Relay (For Low Voltage)

# HSR-3D/3A

### INSTRUCTION MANUAL

We appreciate you for purchasing HanYoung NUX Co.,Ltd product. Before using the product you have purchased, check to make sure that it is exactly what you ordered. Then, please use it following the instructions below.

#### HANYOUNGNUX CO.,LTD

AD OFFICE 1381-3, Juan-Dong, Nam-Gu Incheon, Korea TEL: (82-32)876-4697 FAX: (82-32)876-4696

#### PT. HANYOUNG ELECTRONIC INDONESIA

Jl. Pinang blok F16, No.02 Delta Silikon III Cicau Cikarang Pusat, Bekasi Indonesia

TEL: 62-21-8911-8120~4 FAX: 62-21-8911-8126

# HANYOUNG NUX



# Safety Information -

Alerts declared in the manual are classified to Danger, Warning and Caution by their criticality

<b>⚠</b> DANGER	DANGER indicates an imminently hazardous situation which, if
Z!\DANGER	not avoided, will result in death or serious injury
<b>⚠</b> WARNING	WARNING indicates a potentially hazardous situation which, if
Z:\WARNING	not avoided, could result in death or serious injury
<b> ⚠</b> CAUTION	CAUTION indicates a potentially hazardous situation which, if not
Z:\CAUTION	avoided, may result in minor injury or loss of properity

# **⚠** DANGER

Do not touch or contact the input/output terminals because they may cause electric shock.

# **⚠ WARNING**

- The place of operating this product affect to the its functions and life cycle so that avoid to use it in the following circumstance.
- · Before you use, read safety precautions carefully, and use this product properly.
- Do not touch or contact the input/output terminals because they may cause electric shock.
- To prevent defection or malfunction of this product, supply proper power voltage in accordance with the rating.
- To prevent electric shock or devise malfunction of this product, do not supply the power until the wiring is completed.
- Reassemble this product while the power is off. Otherwise, it may cause malfunction or electric shock.
- If the user use the product with methods other than specified by the manufacturer, there may be bodily injuries or property damages.
- Due to the danger of electric shock, use this product installed onto a panel while an electric current is applied.

# **⚠** CAUTION

- Before using the product you have purchased, check to make sure that it is exactly what you ordered.
- Do not use this product at any place with corrosive(especially noxious gas or ammonia) or flammable gas.
- Do not use this product at any place with liquid, oil, medical substances, dust, salt or iron contents.
- Do not use this product at any place with excessive induction trouble, static electricity or magnetic noise.
- Do not use this product at any place with possible thermal accumulation due to direct sunlight or heat radiation.
- When the product gets wet, the inspection is essential because there is danger of an electric leakage or fire.
- · Do not connect anything to the unused terminals.
- · For DC types, connect wires at the correct position after checking polarity of terminal.
- · The rated heat sink must be used; otherwise, the product may be destroyed.
- · When product is disposed, treat as a industrial waste.

# Suffix code

MODEL	Code			е		Information			
HSR					Three-Phase Solid State Relay				
Control	2					Single Phase			
Phase	3		i I		i	Three Phase			
Input contro	ol	D			l I	4 - 32 V d.c			
voltage		Α				90 - 264 V a.c			
10						10 A			
Rated load current 30 40				1	20 A				
			30		i I	30 A			
				l	40 A				
2			2		90 - 264 V a.c				
Rated load voltage 4				4		90 - 480 V a.c			
Operation method Z					Z	Zero Cross Switching			
(Switching Mode) R					R	Random Switching			

# Specification

FACTORY

■ Direct Current(DC) Input Type

	Direct Garrent	(,		. , , , ,							
Model		HSR-3D	102Z	HSR-3E	202Z	HSR-3D	302Z	HSR-3D402Z			
	Model	HSR-3D	HSR-3D102R HSR-3D202R HSR-3D302R HSR-3D402								
	Rated Load Voltage		100 - 240 V a.c								
	Load Voltage Range		90 - 264 V a.c								
0	Peak Voltage (non-repetition)		600 V								
U	Rated Load Current	10 A		20 A 30 A			40 A				
Т	Frequency	25 - 65 Hz									
Р	In-flow Current	125 /	4	260	Α	315 A		315 A			
U	Out-flow Current	15 mA									
Т	Output ON Current	1.5 \	/			1.8	V				
	Minimum Operation Current	1 A									
	Zero Cross Function	0	Х	0	Х	0	Х	0	Х		
ı	Rated Voltage	5 - 24 V d.c									
N	Operating Voltage Range	4 - 32 V d.c									
Р	Impedance	4 kΩ max.									
U	Operation Voltage	3 V d.c min.									
Т	Return Voltage	1.4 V d.c max.									
Ĺ	Input Current	Constant Current method : 14 mA ( $\pm$ 3)									
	Response Time	1/2Cycle+   Below   1/2Cycle+   Below   1/2Cycle+   Below   1/2Cycle+   Below   1 ms Max.   1 ms   1 ms Ma									
lr	nsulating Resistance	500 V d.c, 100 № (Input/Output and between Cases)									
	Dielectric strength	2500 V a.c (50 Hz for one minute)									
Vibration		10 - 55 $H_Z,$ Double amplitude: 1.5 $_{\text{mm}},$ Each $X \cdot Y \cdot Z$ axis for 2 hours									
	Impact	1000 🕪 (about 100 G), Each X · Y · Z axis for 3 times									
S	Storage Temperature	-30 - 90 ℃									
Α	mbient Temperature	-20 - 80 ℃									
	Ambient Humidity	45 - 85 % R.H.									
	Weight	About 380 g									

Notes: The weight does not include package box.


#### ■ Alternating Current(AC) Input Type

Model		HSR-3A	102Z	HSR-3A202Z		HSR-3A302Z		HSR-3A402Z			
	Wodel	HSR-3A	102R	HSR-3A	202R	HSR-3A	302R	HSR-3A	402R		
	Rated Load Voltage	100 - 240 V a.c									
	Load Voltage Range	90 - 264 V a.c									
	Peak Voltage (non-repetition)	600 V									
U	Rated Load Current	10 /	4	20 A 30 A			40 A				
Т	Frequency	25 - 65 Hz									
Р	In-flow Current	125	Α	260	Α	315	Α	315 A			
U	Out-flow Current	15 mA									
Т	Output ON Current	1.5	V		1.8	1.8 V					
	Minimum Operation Current	1 A									
	Zero Cross Function	0	Х	0	Х	0	Х	0	Χ		
ı	Rated Voltage	100 - 240 V a.c									
N	Operating Voltage Range	90 - 264 V a.c									
P	Impedance	40 kΩ max.									
U	Operation Voltage	75 V a.c min.									
Т	Return Voltage	50 V a.c max.									
	Input Current	240 V a.c / 9 mA (±4)									
	Response Time	1/2Cycle+ Below 1/2Cycle+ Below 1/2Cycle+ Below 1 ms Max. 1 ms									
Ir	nsulating Resistance	500 V d.c, 100 № (Input/Output and between Cases)									
	Dielectric strength	2500 V a.c (50 Hz for one minute)									
	Vibration	10 - 55 Hz, Double amplitude: 1.5 mm, Each X $\cdot$ Y $\cdot$ Z axis for 2 hours									
	Impact	1000 m/s² (about 100 G), Each X · Y · Z axis for 3 times									
S	torage Temperature	-30 - 90 ℃									
Α	mbient Temperature	-20 - 80 ℃									
	Ambient Humidity	45 - 85 % R.H.									
	Weight	About 380 g									

Notes: The weight does not include package box.


# **External Dimension**

Unit: mm

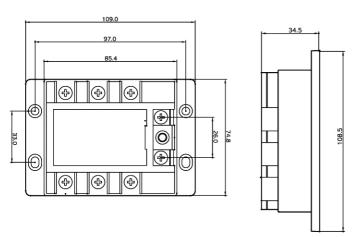


# Circuit

# **■** DC Input Type

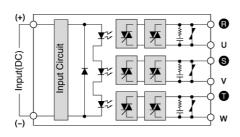


#### ■ AC Input Type

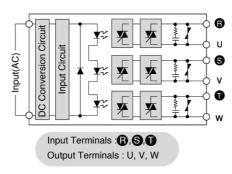

# Application Circuit-


# **■** DC Input Type


### ■ AC Input Type

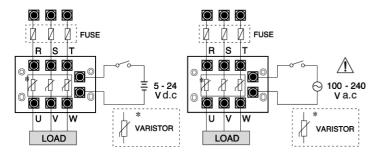


# Load Current Characteristics


### ■ Input Voltage / Current Characteristics

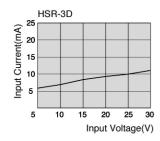

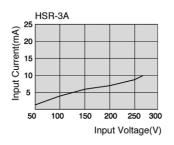



#### ■ Load Current Characteristics

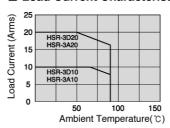

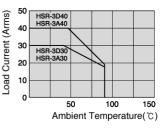

#### ■ Surge Current Characteristics

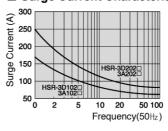


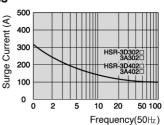

# Heat Sink-

Unit: mm

#### ■ Model Name : HSM Series

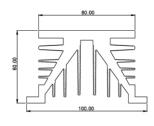



Model	Applicable Model	Capacity(A)	Length(L)
HSM-70	HSR-2□10□□	10(A)	70 mm
HSM-110	HSR-2□20□□	20(A)	110 mm
HSWI-110	HSR-2□30□□	30(A)	110
HSM-150	HSR-2□40□□	40(A)	150 mm
H2IVI-120	HSR-3□10□□	10(A)	150 mm
LICM 000	HSR-3□20□□	20(A)	200 mm
HSM-200	HSR-3□30□□	30(A)	200 mm
HSM-250	HSR-3□40□□	40(A)	250 mm

<sup>\*</sup> The contents above may change for performance improve without any prior notice

### ■ Precautions during the use of Heat Sink

- · Using standard heat sink is mandatory for this product.
- Even the standard heat sink is used, SSR damage may occur if the environment temperature rises or if the ventilation does not work well. (Environment temperature : over 40  $^{\circ}$ C)
- The normal SSR element is damaged at the maximum temperature of 125 °C. When the temperature of heat sink is 80°C, the temperature of the element reaches around 125 °C. Therefore, during operation, measure the temperature of heat sink.
- When you connect SSR onto the heat sink, heat-transmitting grease is needed for smooth heat transmission.
- To prevent separation by vibration, tighten up with bolts.
- Do not use any insulating materials such as wood, plastic or rubber.
  The standard heat sink must be greased on the bottom side as shown below and connected.
- \*\*The heatproof silicon grease must be applied thoroughly on the heat sink as well as the bottom of SSR. The case side of heat sink needs to be installed on up and down directions.

